

TIME CHANGE:

To enter the <u>TIME AND DATE</u> programming session of the Norstar, you will press **Feature**8463** (this spells **TIME**) and the password you will enter is **266344**.

Once you are in <u>TIME AND DATE</u> programming, the display will read HOUR: ##.

(If 8463 does not work, you have an older software level. You need to start with Feature **266344 and the password you will enter is 266344.)

The second line in the display will read NEXT and CHANGE.

Press the button under **CHANGE**, to change the Hour, and enter the correct hour.

If the Minutes are correct, press the Release key and you are done, if not, proceed.

Press the button under **NEXT**, to go to Minutes, and enter the correct minuets.

If the Date is correct, press the Release key and you are done, if not, proceed and change the date using the procedure as above.

SAVE THESE INSTRUCTIONS:

Since the time change is three weeks earlier in the Spring and one week later in the Fall, you will have to adjust the time again when the regular time changes were supposed to take place.

Fax: 949 448-8286